


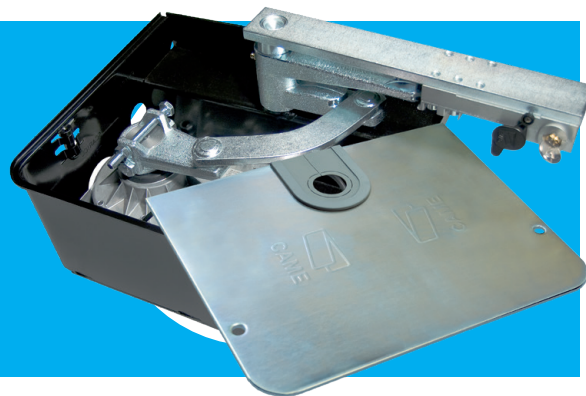

FROG Lever release systems

The Frog Underground system is supplied with one of three release mechanisms; a triangular key system, a DIN key system or a lever system. Release instructions for the lever system is below and for the key systems on the previous page.



TO MANUALLY RELEASE THE GATES:



ALWAYS isolate the power supply as instructed by your installer (even during a power cut).



Release any additional locking device fitted to the gate (eg. electric lock etc).

A





INSTRUCTIONS



- 1** Lift tab.
- 2** Insert lever **A** into lock and turn 90°. The gate should now be manually released.
- 3** Remove the lever and open the gate carefully at the same speed as the automatic operator.

To re-engage the gate, return it to the closed position and use the lever to engage the lock. Please note, it may be necessary to operate the motor once power is restored to fully engage the system. Please take due care when operating the system in this manner.

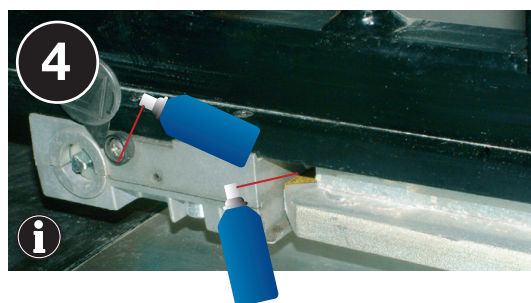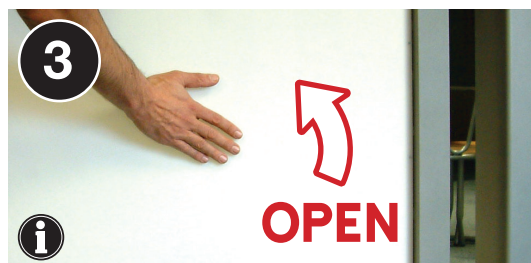

BASIC INSTALLER MAINTENANCE

Hints & Tips



- Lift manual release tabs & spray the locks on both sides with suitable penetrating lubricant.
- Spray into the lock at the connection point (brass part) with suitable penetrating lubricant (See pic **4**).
- Lubricate gate hinges.
- Manually release the gates at least once per month.