

# BXV SLIDING GATE AUTOMATION



## BXV Key release system

The BXV sliding gate operator has a manual release system found behind a locked compartment on the front of the motor.



### TO MANUALLY RELEASE THE GATES:



**ALWAYS** isolate the power supply as instructed by your installer (even during a power cut).



Release any additional locking device fitted to the gate (eg. electric lock etc).

**A**



## INSTRUCTIONS



- 1** BXV features a key protected manual release system. With the key release disengaged the unit does not work.
- 2** Open the lock cover cap.
- 3** Turn the 3-sided triangular key provided **A** to release the lever.
- 4** Turn the lever Anticlockwise until you feel the mechanism release.
- 5** With your other hand firmly open the gate. The gate should be manually released.

To re-engage, close the gate and turn the lever clockwise until you feel the mechanism is tight, push the mechanism in while turning the key to lock it in place. Take the key out and replace the cap. Attempt to manually open the gate to ensure the system is fully engaged.

## BASIC INSTALLER MAINTENANCE

### Hints & Tips



- Manually release the gates at least once per month.
- If a ground track is fitted, ensure the track is always clear of debris.
- Lubricate manual release compartment and key mechanism.

